

Rope To Wire Splice

LIROS-Herkules

Ref.00154-01550

LIROS-Top Cruising-Color

Ref.00152-01528




LIROS Splicing instruction no. 6



Tools needed.



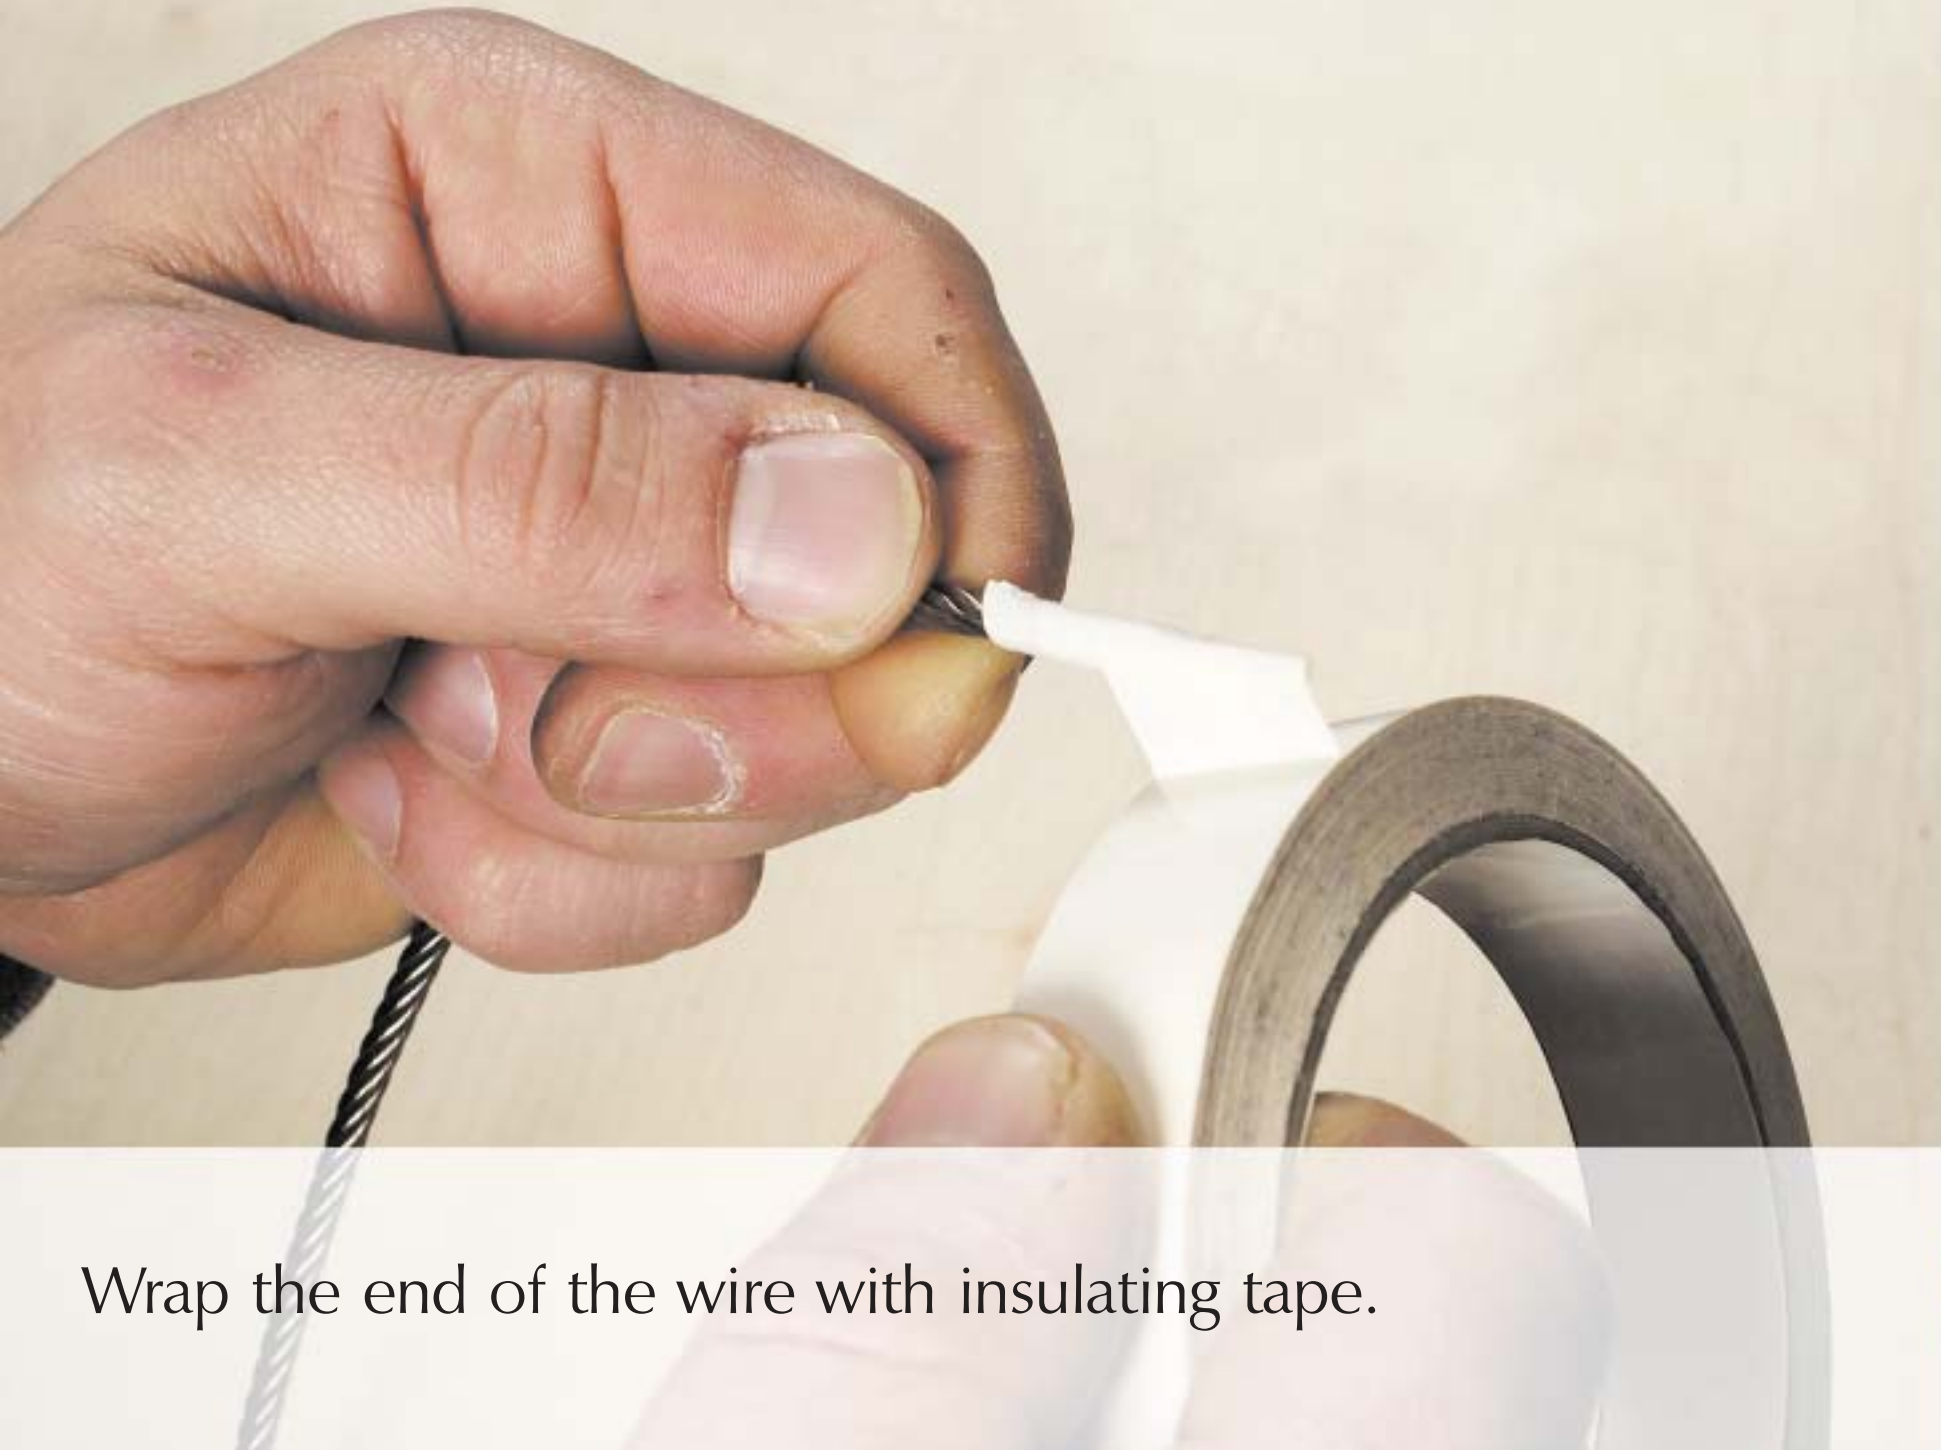

Wrap the end of the wire with insulating tape.





Pull approximately 20 cm of core out of the cover and cut off. Then holding onto the end of the core slide the cover back approx. 3 m.





Insert the wire into the core to a distance of approx. 70 cm.





Hold the wire in a vice and unravel the core for 15cm.
Then make the strands into roughly 3 equal strands.






Using the fid pull the first strand through under two strands of wire.





Make a complete circuit of the wire inserting each one of the three rope strands over and under 2 wire strands. At least three complete sets of turns should be made.



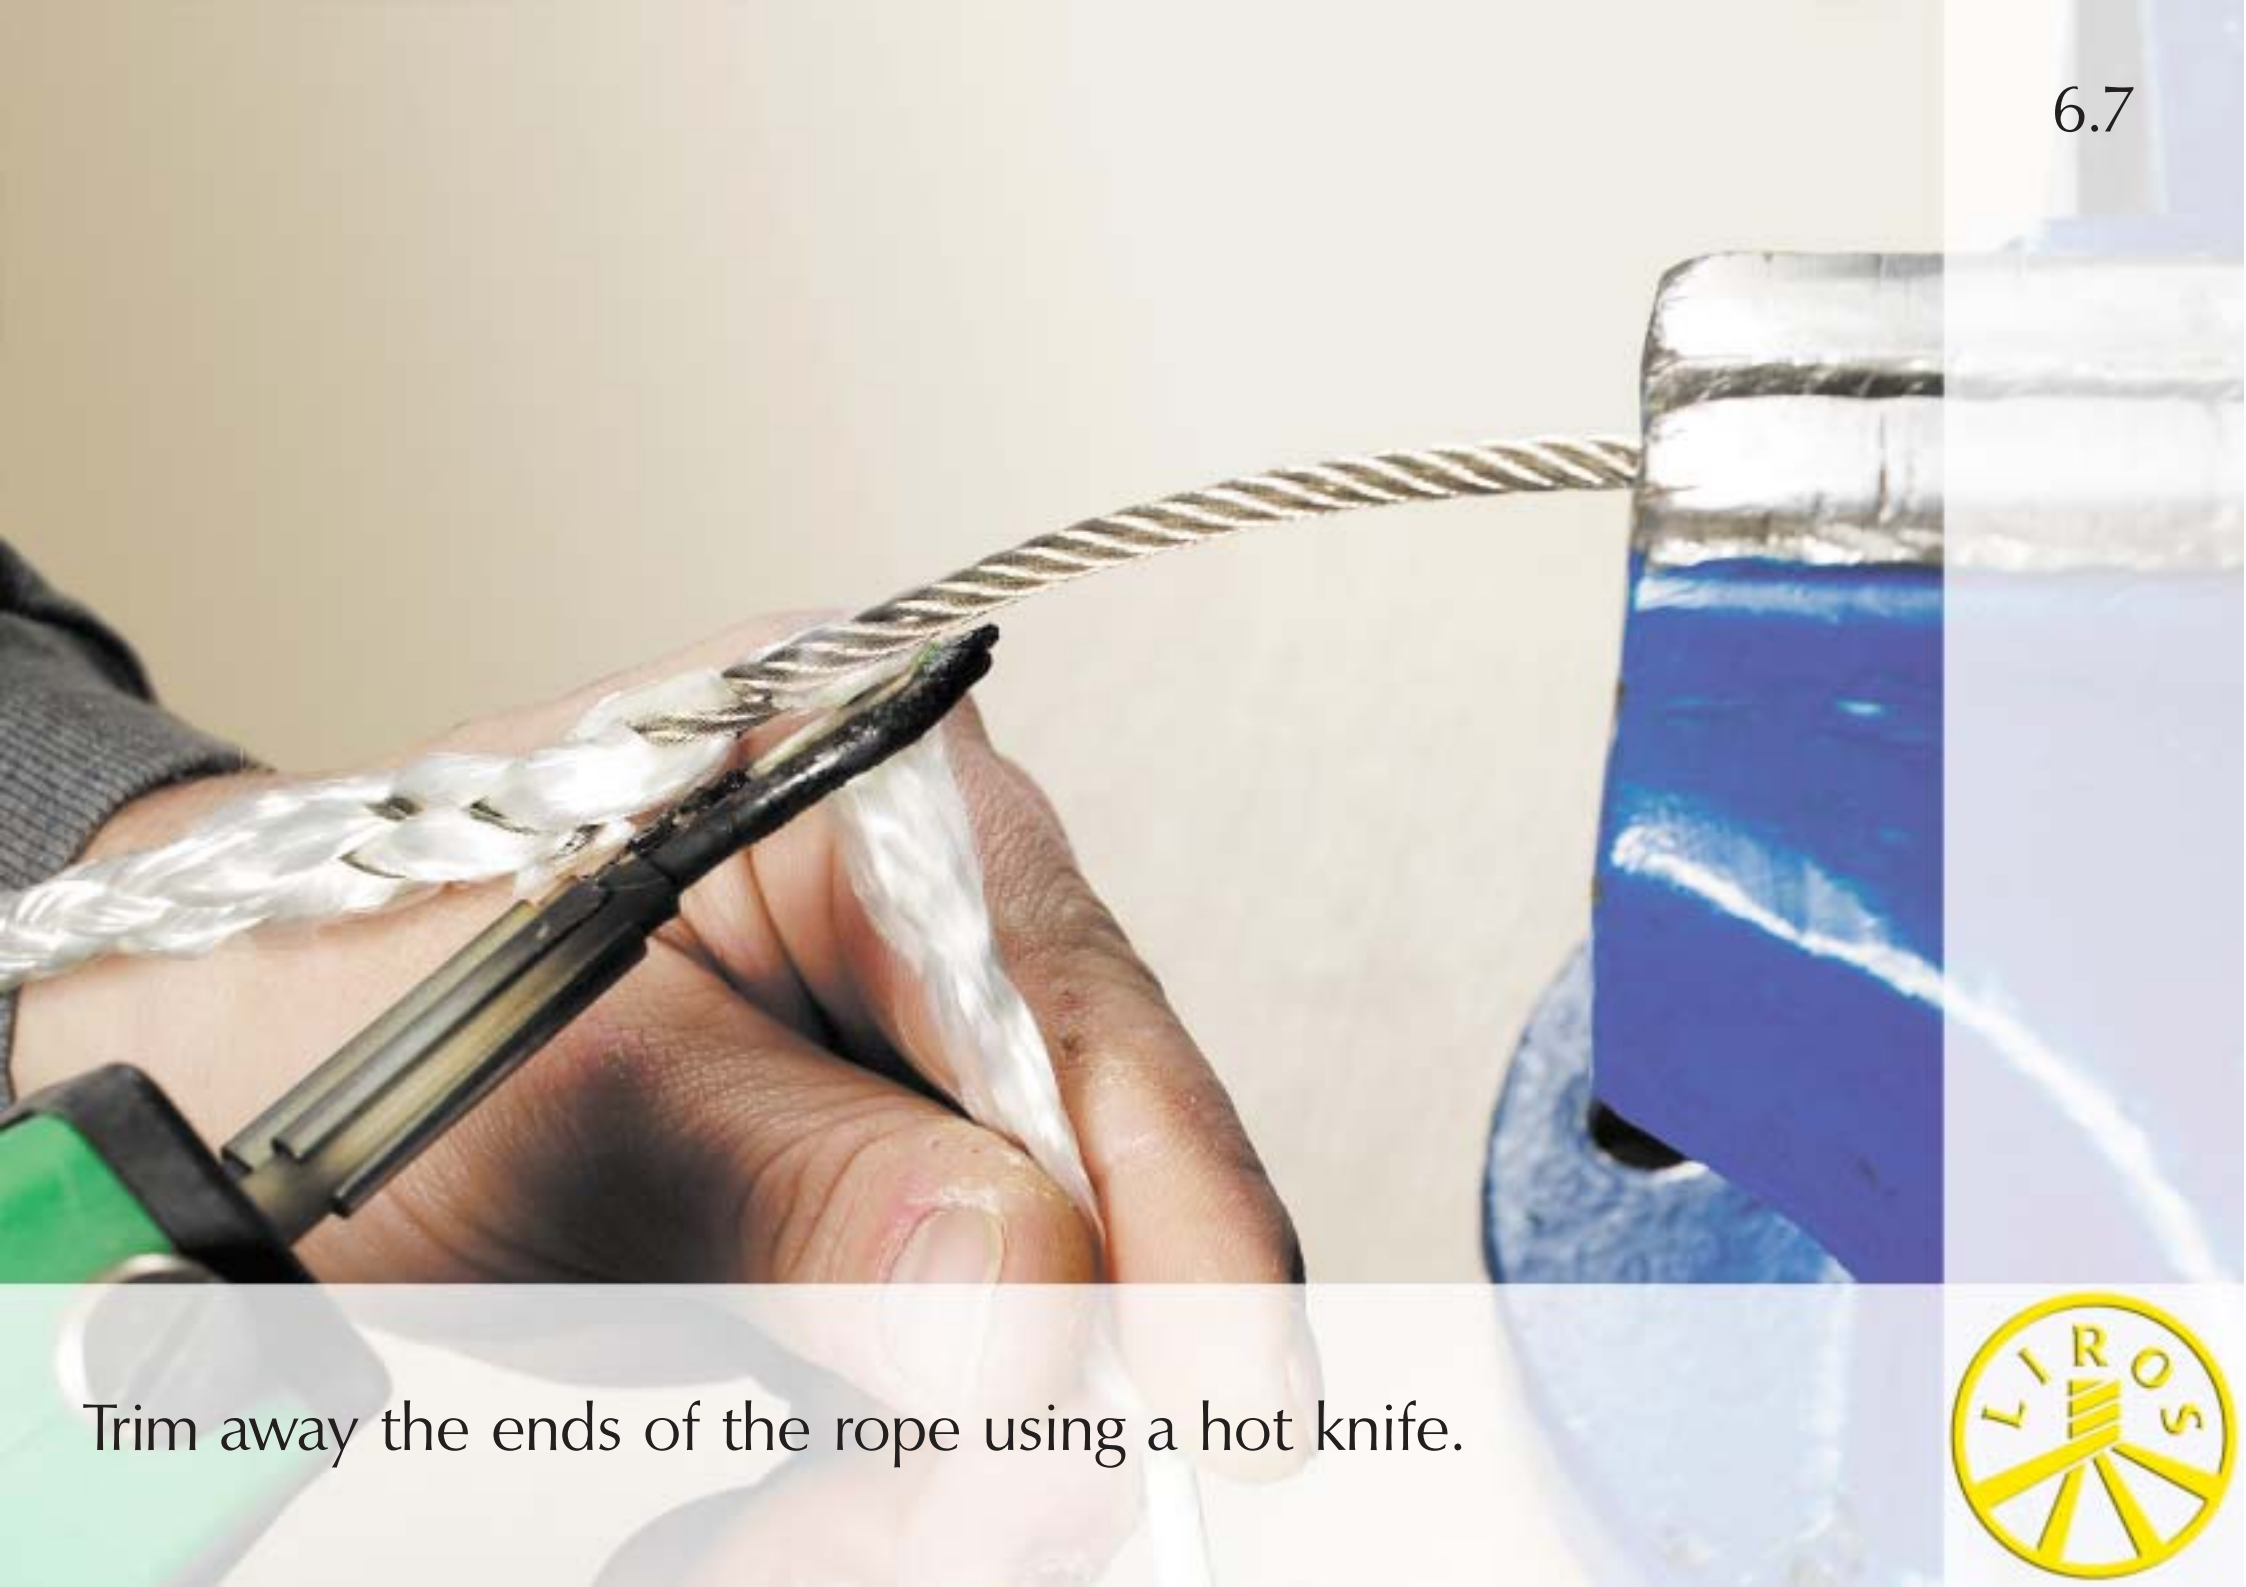

Trim away the ends of the rope using a hot knife.






Now milk the cover back over the splice.





Now splice the cover into the wire in the same way as the core was spliced into the wire.



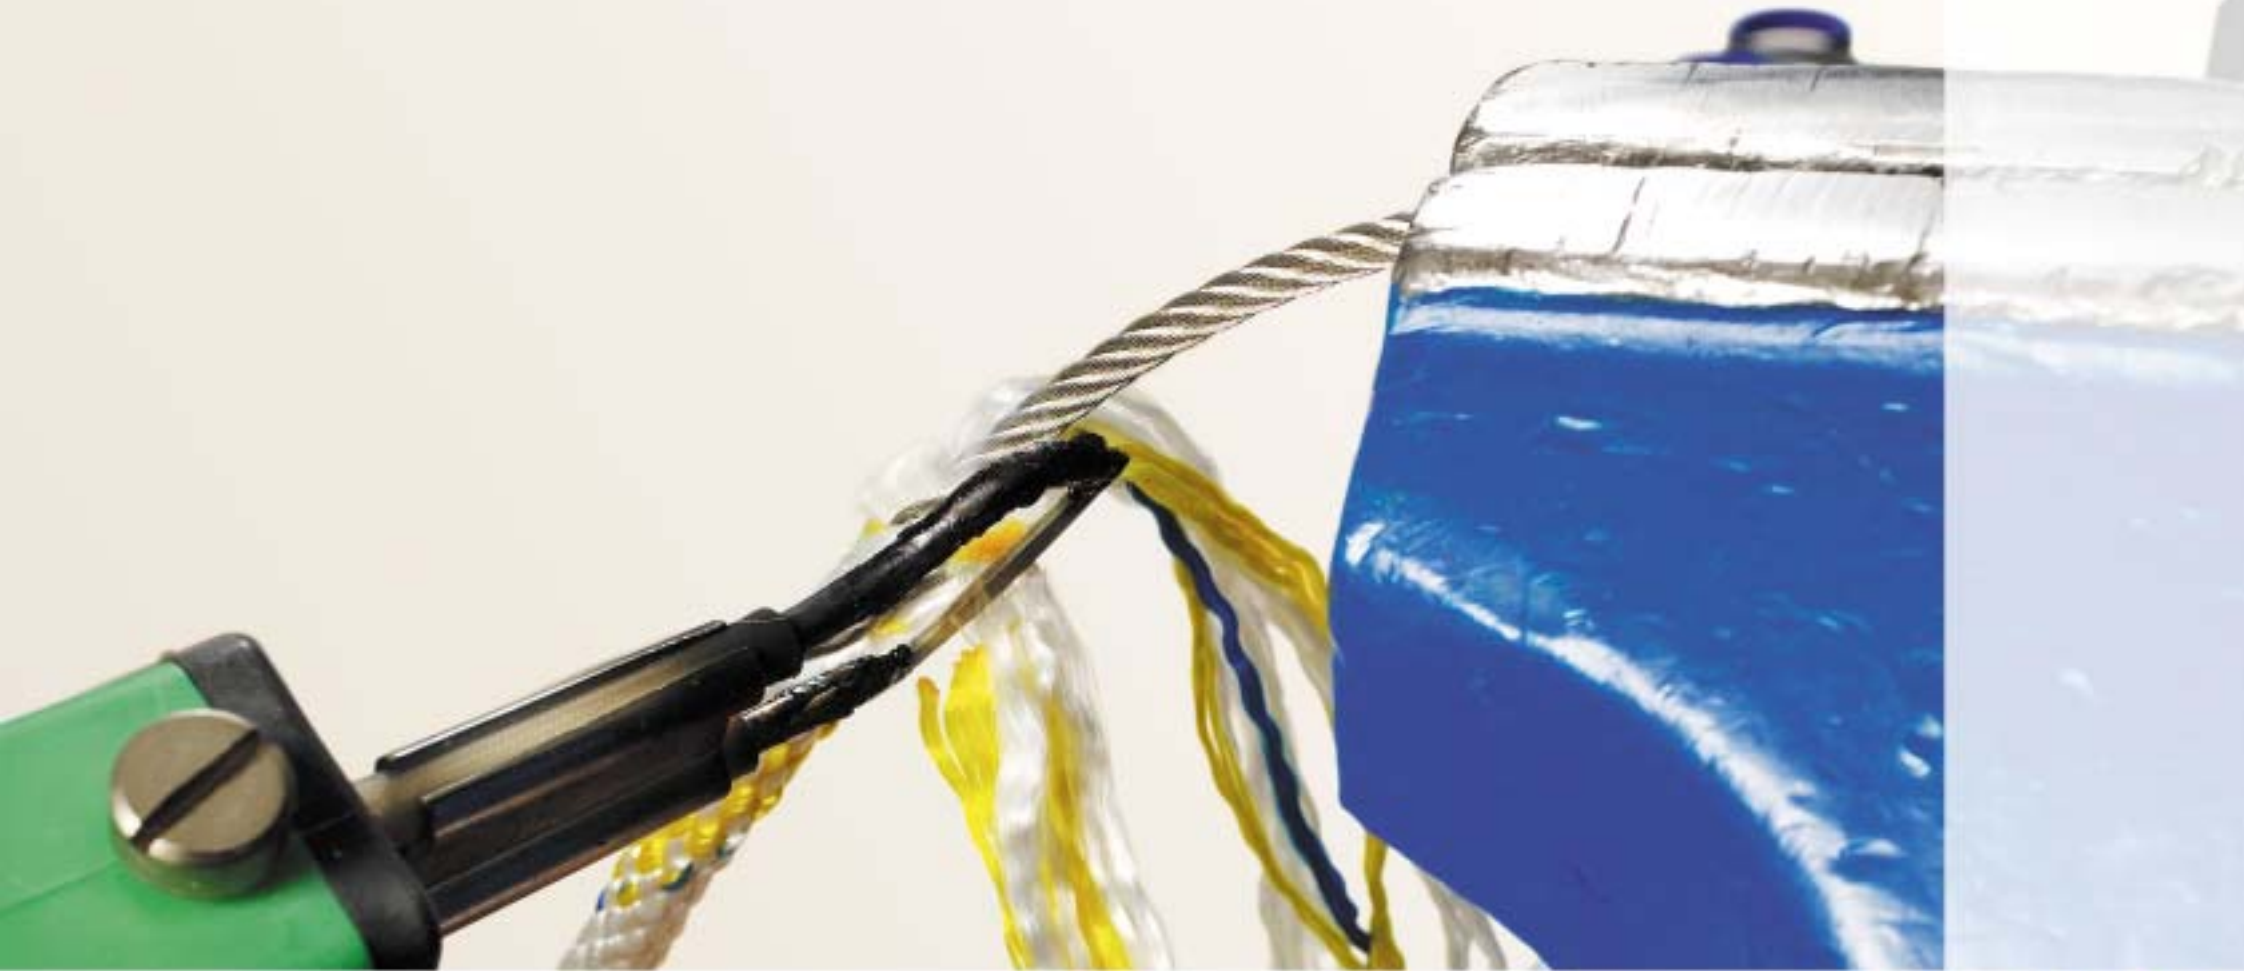

Again trim the protruding fibres using a hot knife.





The finished rope to wire splice.

